

220v breakers

1. Main breaker, leave on at all times.
2. Water heating
3. Switch of outlets heads
4. Switch of outlet cabins and saloon
5. Charger of batteries



The 220 volt outlets will operate whilst you are plugged into shore power.



Switch and indicator of 220v shore connection . Inverter and 0 positions are not in use.



Shore cable switch is located in starboard aft cabin behind the wall where you can come through the inspection hatch.

Battery switches