

Battery switches

Engine main 12v switch is located under the companionway



Service battery main switch located by right side of 12v control panel.



Boethruster switch located in starboard bow cabin.

