

## 21. Bowthruster

Bowthruster located in space under the bed of bow starboard cabin



Switch on button for thruster activated

Bowthruster switch



Bowthruster fuse



Remote control of bowthruster Quick (maximum time of continuous operation 5 seconds).

