

3. Engine start procedures.

- Make sure engine is in neutral.
- Press the on/off; wait to hear 2 "beeps" Then press the start button until you hear the engine running.
- When the engine is running check to make sure you have water coming out of the exhaust.
- To stop the engine press the stop button until the engine has stopped.
 - Alarm will sound after you stop the engine. Press the on/off once more to turn off the ignition.



Should you hear an engine alarm during operation, check the tachometer to identify the reason for the alarm (over heating/oil pressure/battery) immediately shut down the engine-CALL Technical support.

All our yacht engines run with diesel fuel. There is a diesel filler cap under the small cockpit floor panel at the stbd helm which is clearly marked "DIESEL".... DO NOT PUT WATER IN . Fuel level instrument shows the diesel level of the tank with a large deviation and helps you to be informed when tank will be empty, and not to indicate the exact diesel level of full tank.
Average fuel consumption 7 liters per hour.

MAXIMUM WORKING SPEED OF ENGINE ARE 2200 RPM